

# Programmer of Xerox90 for serial port.

Net	Direction	PC 25	PC 9	Name
SCLOut	→	4	7	RTS
SCLIn	←	6	6	DSR
SDAOut	→	20	4	DTR
SDAIn	←	5	8	CTS
GND		7	5	GND

PC 25: Serial (PC 25) Connector

PC 9: Serial (PC 9) Connector

Signal direction: PC Serial port - programmer

+5V - external voltage

